


BULLETIN: The Angled Digger® Support Plate Cannot Be Installed on a Camoplast Preholed Tracks

The openings in the Camoplast Preholed track are centered between the lugs. The pattern is designed to accommodate a Woody's® Single Round, Single Square or Single Triangle Digger® support plate. **The pattern does not accommodate Angled Digger® and Angled Double Digger® Support Plates.**

The opening needed to install the Angled Digger® support plate is offset from the stud installation openings created during manufacturing of the preholed tracks.

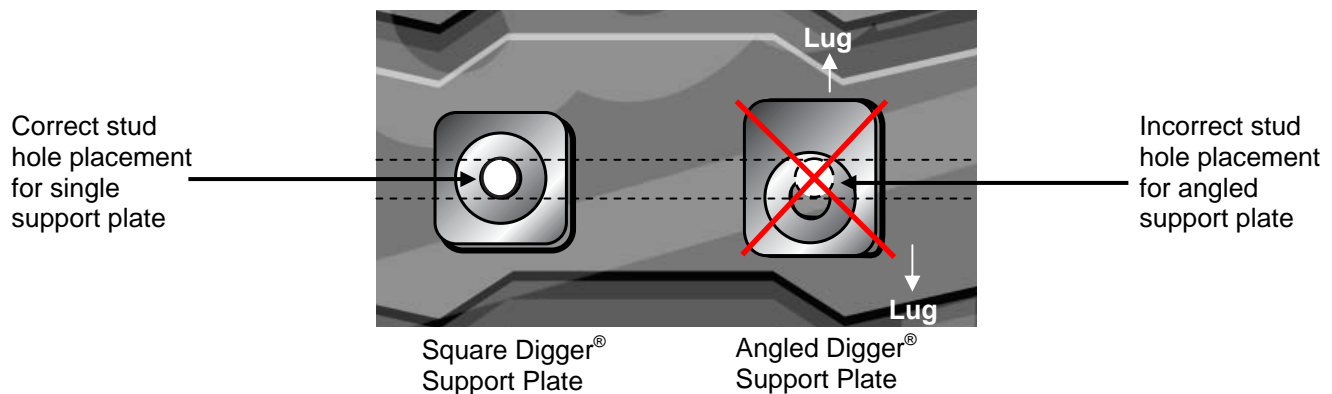

Do Not enlarge the hole in the track in an attempt to install Angled Digger® Support Plates on Camoplast Preholed tracks.

Instructions for installing Angled Digger® Support Plates are included in every package. If you do not have the Angled Digger® Support Plate instructions, they are available on <http://www.woodystraction.com/installation-instructions> under 'Nut and Support Plates' or call (989) 689-4911.

Always review the snowmobile and track manufacturer's studding recommendations. You may void your warranty if their recommendations are not followed.